

- (1) CONTROL CABINET
- (2) FLAME DETECTOR
- 3 FLAME DETECTOR TUBE
- (4) BACK PLATE ASSEMBLY
- 5 OIL IGNITION TRANSFORMER
- (6) MODULATING MOTOR
- 7 MODULATING MOTOR
 MOUNTING BRACKET <IF USED>
- MODULATING PRIMARY AIR
 CYLINDER LINKAGE ASSEMBLY
- (9) AIR INLET ASSEMBLY
- (10) PRIMARY AIR CYLINDER

- (1) OIL DRAWER ASSEMBLY
 - . AIR DIFFUSER
 - . OIL NOZZLE
 - . OIL NOZZLE ADAPTER
 - . OIL IGNITION ELECTRODES <IF USED>
 - . MAIN FUEL TUBE
 - . IGNITION CABLES <IF USED>
- (12) COMBUSTION HEAD
- 13 PRIMARY GAS ORIFICES
 <OUTER RING>
- 14) SWIRLER
- 15) LEAK TEST VALVE
- (16) BUTTERFLY GAS VALVE
- 17) SECONDARY GAS ORIFICES
 <INNER RING>
- (18) 216C GAS PILOT ELECTRODE ASSEMBLY

- 19) 216C PILOT PACKING NUT
- (20) PILOT AIR TUBE
- 21) BURNER HOUSING
- 22) TRANSFORMER MOUNTING BRACKET
- 23 PILOT GAS PRESSURE REGULATOR
- (24) PILOT SOLENOID VALVE
- (25) GAS PILOT IGNITION TRANSFORMER
- (26) BLOWER MOTOR
- (27) MOTOR MOUNTING PLATE
- (28) BLOWER WHEEL
- (29) AIR INLET CONE